


MX Auxiliary contact MX Alarm contact

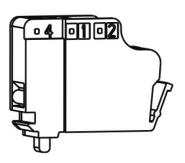












Installation of auxiliary— and alarm contact

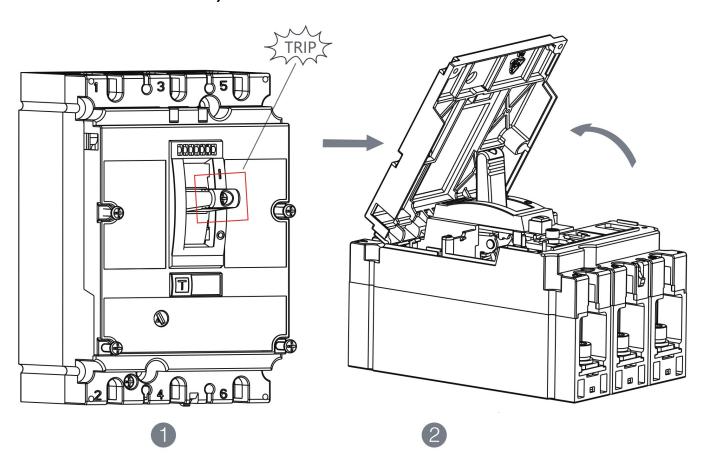

 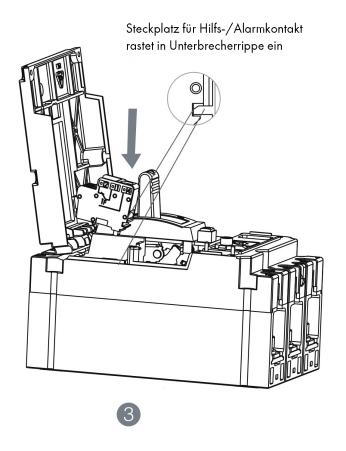




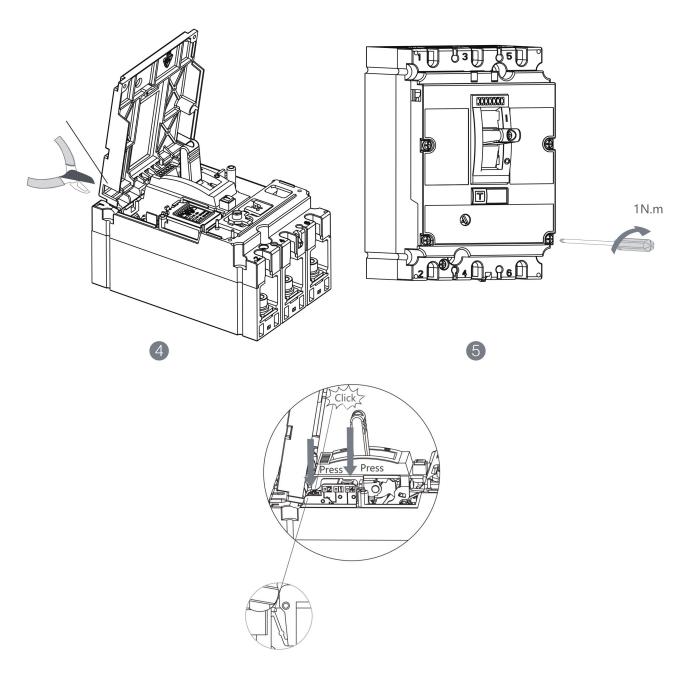

Auxiliary contact-correspondingly installed in the slot marked AX on the circuit breaker

When the circuit breaker is in the "open" or "free trip" position

 


When the circuit breaker is in the "Closed" position



Alarm contact-correspondingly installed in the slot marked AL on the circuit breaker

When the circuit breaker is in the "open" or "closed" position



When the circuit breaker is in the "free trip" (alarm) position

