

# MX Connection extension


## User Manual




**Danger, installation and use by electricians only.**




**MX1**

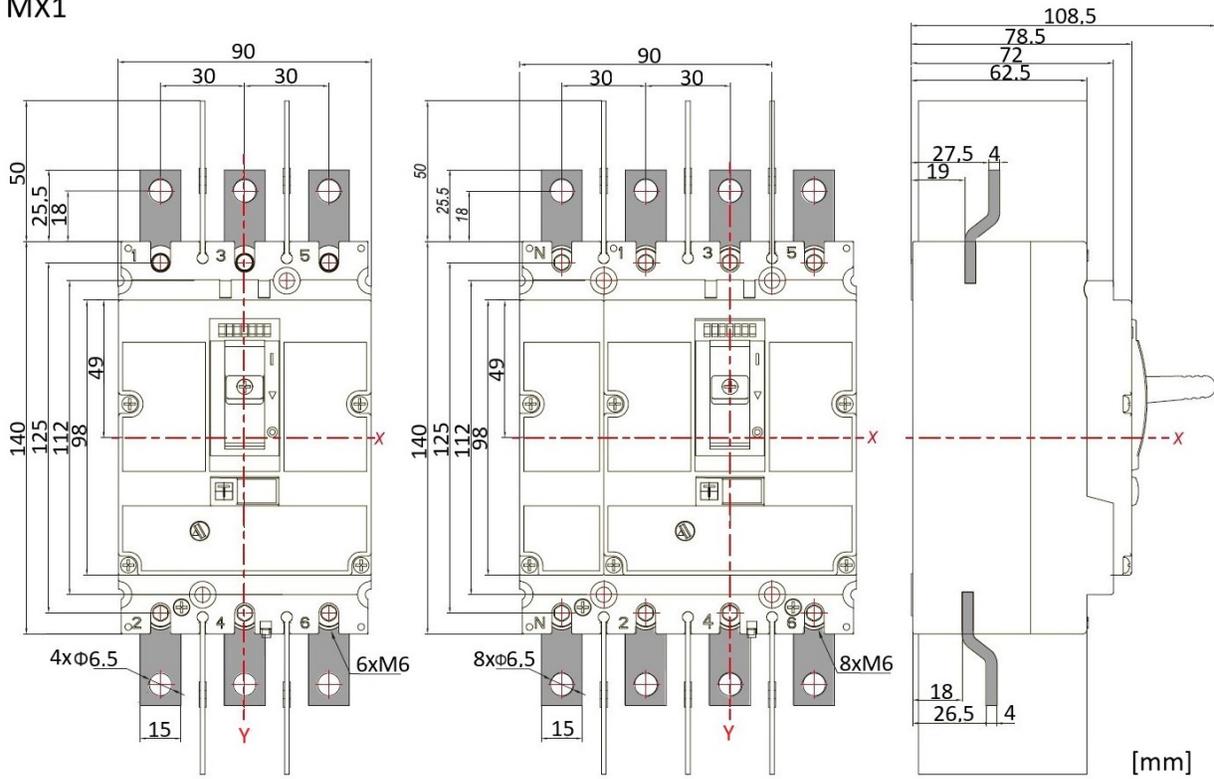


**MX2**

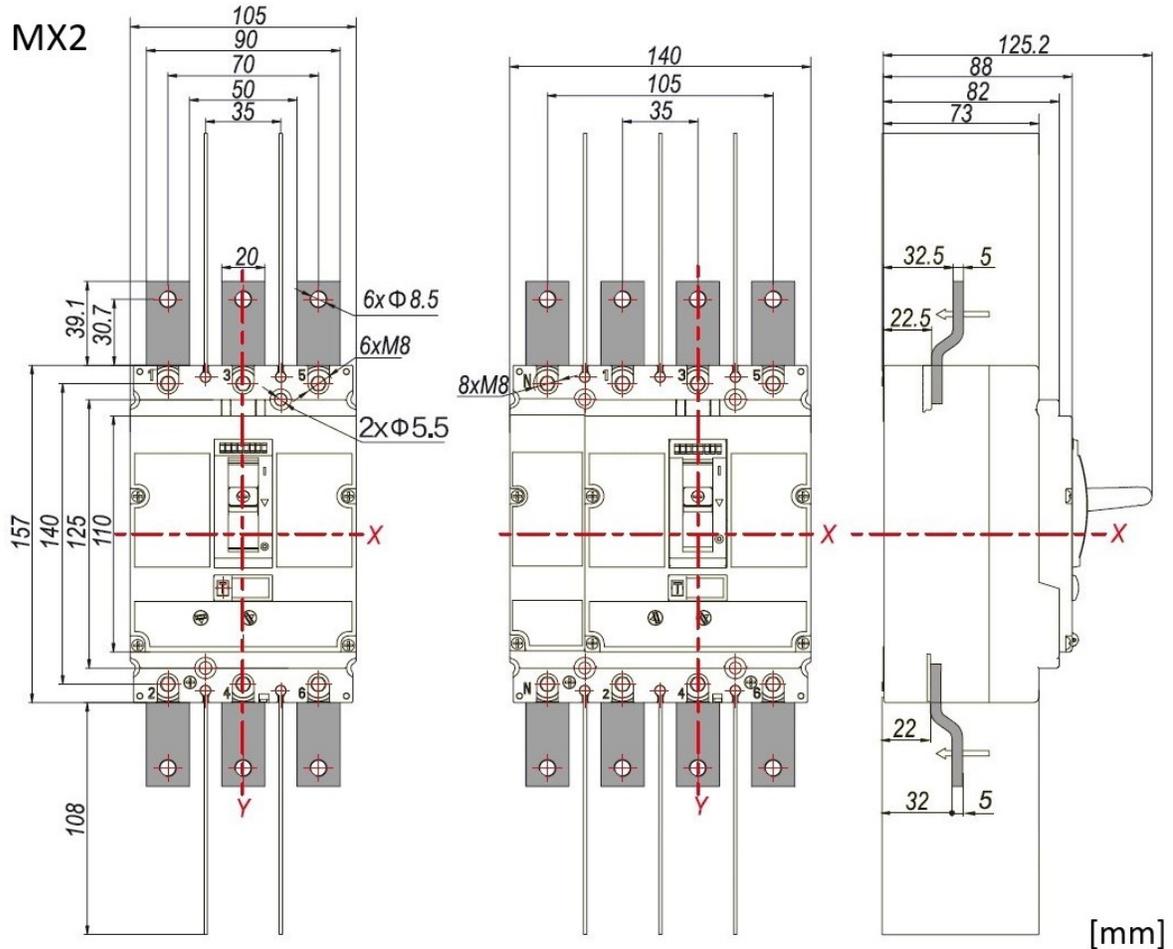


### MX34

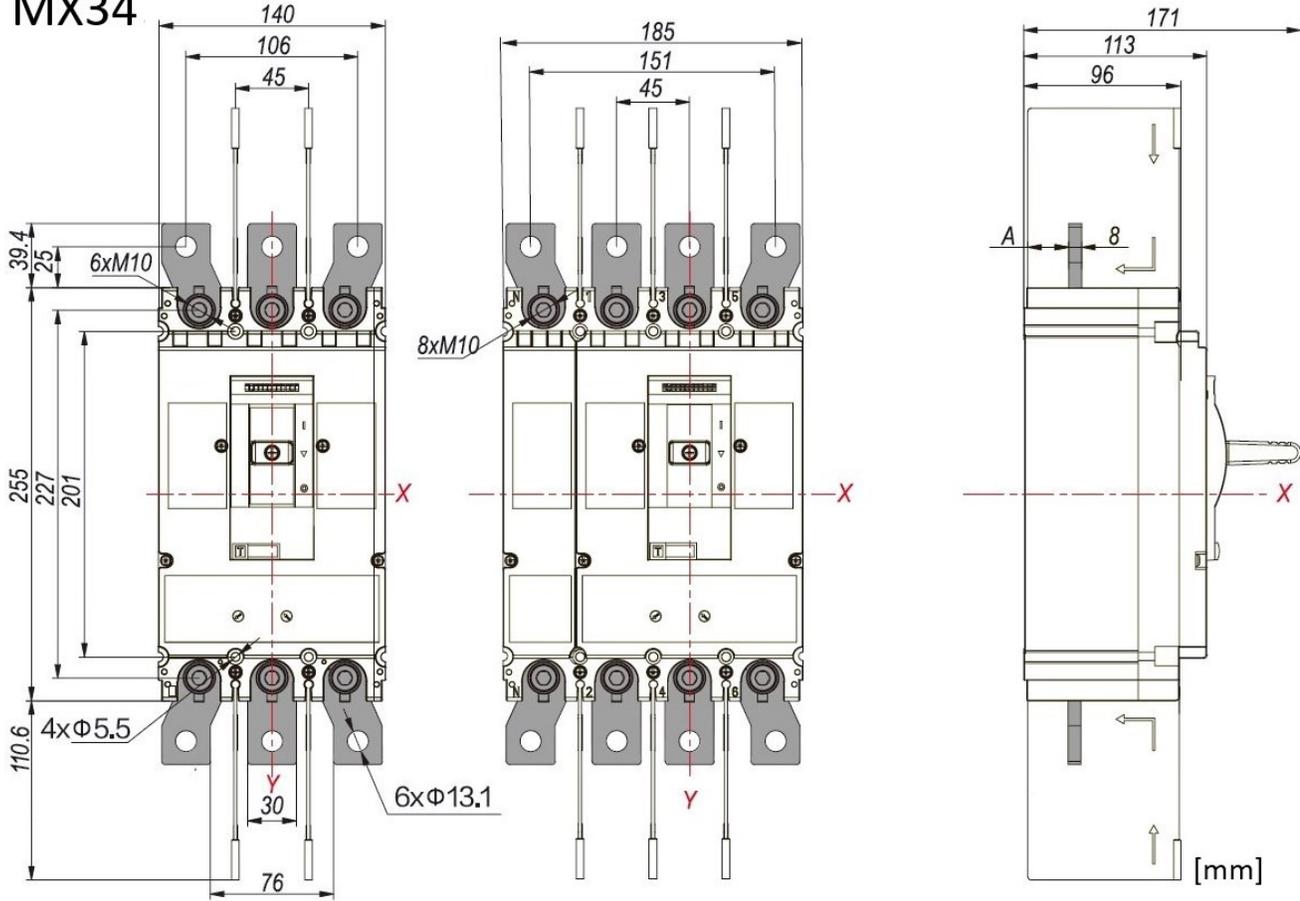


### MX38

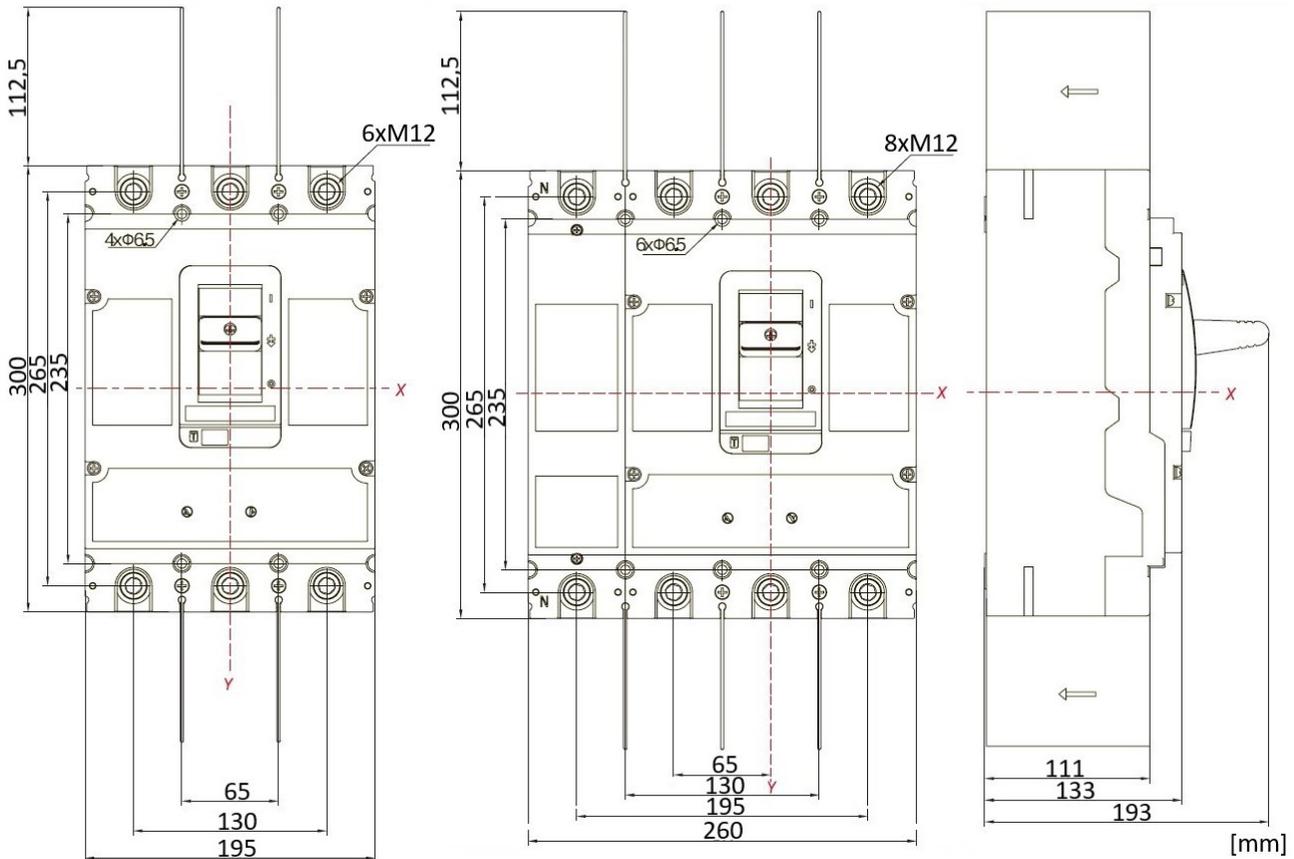


# MX4

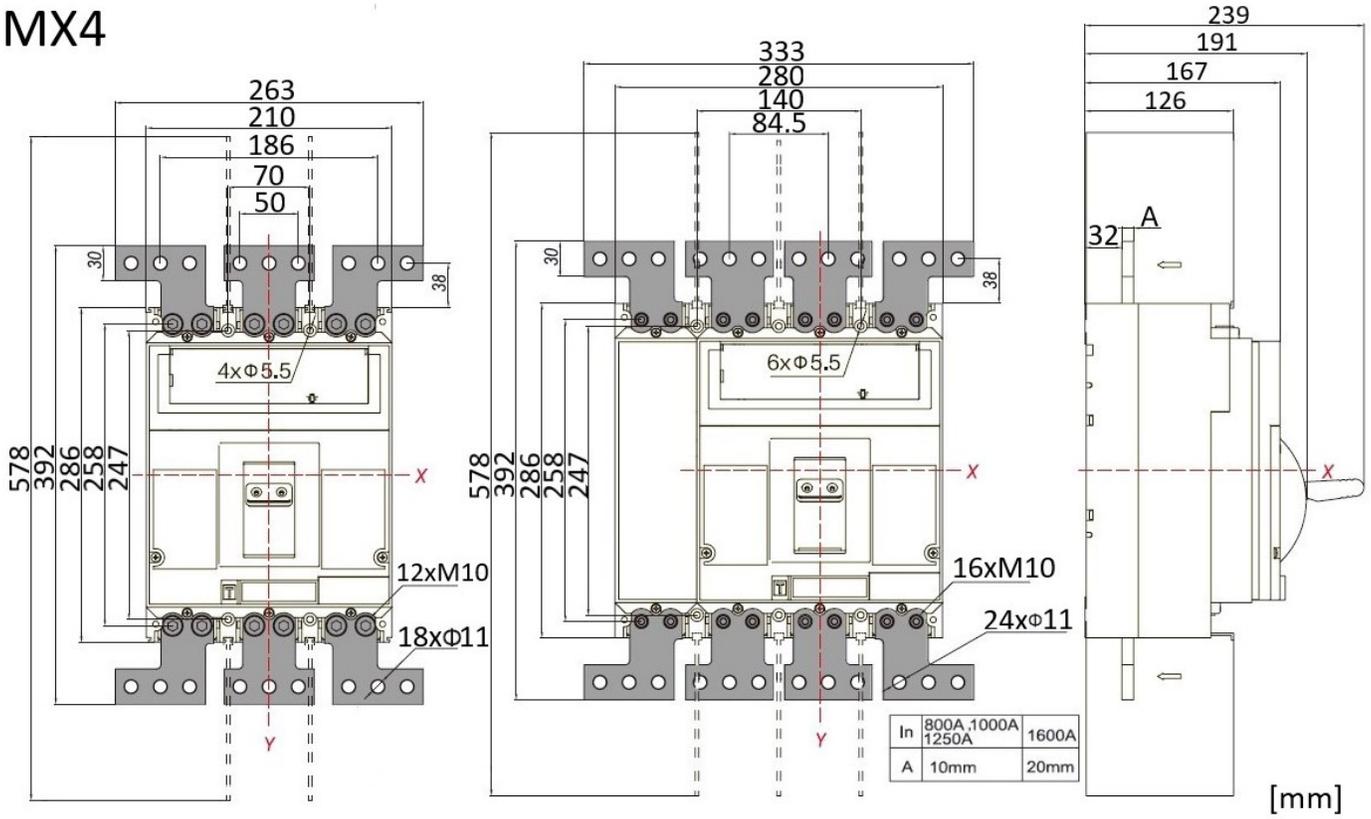


■ Connection openings

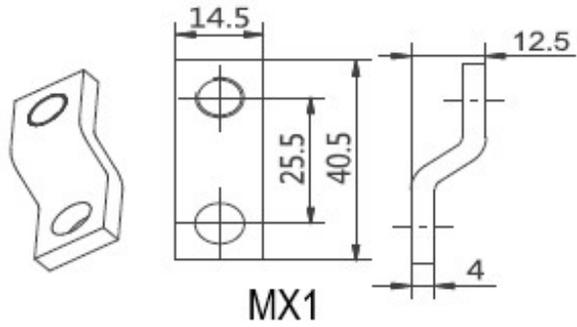


MX1

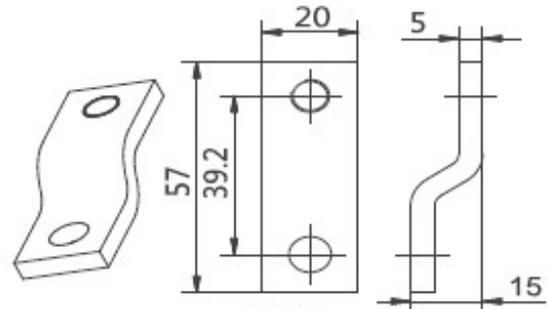


MX2

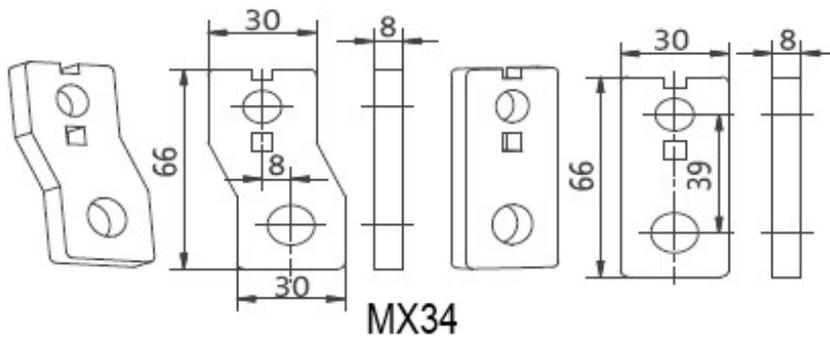


MX34

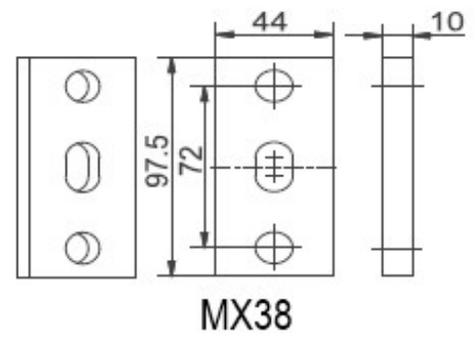


MX38

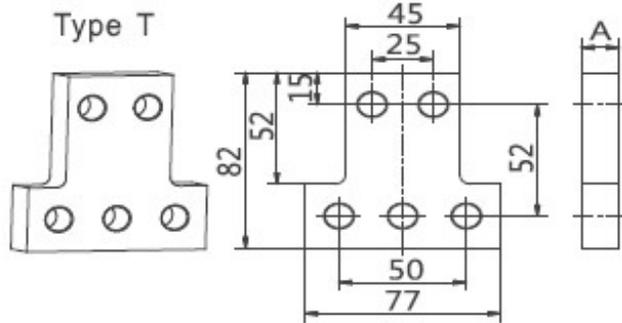

Type T

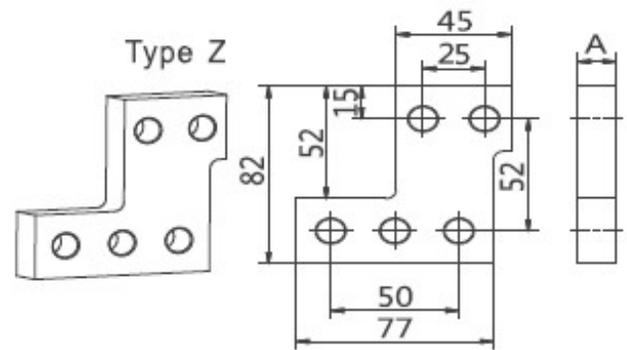

Type Z

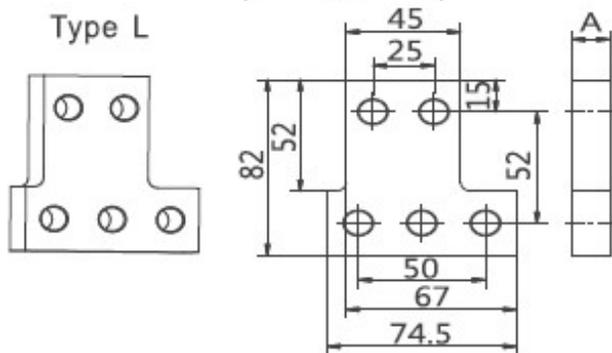

Type L

In	800A, 1000A, 1250A	1600A
A	10mm	20mm

MX4	3P	TZZ
	4P	LLZZ

MX4

[mm]

Note: All connections are optional