■ High Current MCB series BR, 10kA, 1-pole




Schrack-Info

Most common accessories:

- Auxiliary contact 1 NO / 1 NC BR900005
- Busbar 35mm²/3-pole BS900185
- Busbar end cap 3-pole BS900186

Wiring diagram

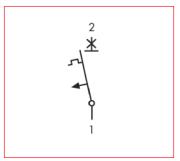

DESCRIPTION	AVAILABLE	ORDER NO.
100A		BR971910
125A		BR971912

High Current MCB series BR, 10kA, 2-pole




Schrack-Info

Most common accessories:

• Auxiliary contact 1 NO / 1 NC BR900005

Wiring diagram

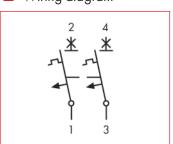

DESCRIPTION	AVAILABLE	ORDER NO.
100A		BR972910
125A		BR972912



■ High Current MCB series BR, 10kA, 3-pole




Schrack-Info

Most common accessories:

- Auxiliary contact 1 NO / 1 NC BR900005
- Busbar 35mm²/3-pole BS900185
- Busbar end cap 3-pole BS900186

Wiring diagram

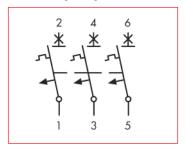

DESCRIPTION	AVAILABLE	ORDER NO.
80A	000 0-0	BR973800
100A	000 0-0	BR973910
125A	355 0- 8	BR973912


High Current MCB series BR, 10kA, 4-pole



Schrack-Info

Most common accessories:

• Auxiliary contact 1 NO / 1 NC BR900005

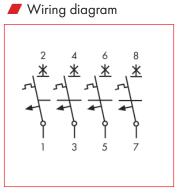

DESCRIPTION	AVAILABLE	ORDER NO.
80A	000 0-0	BR974800
100A	000 0-0	BR974910
125A	000	BR974912