





■ INSTRUCTION SHEET: HSISR6SI3A TOOLLESS LINE PLUG CAT.6_A

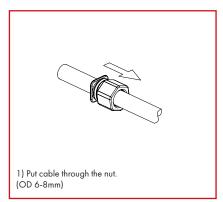


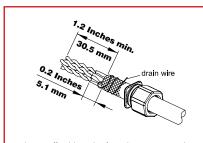



- 2.1) Strip off cable jacket for at least 30mm and retain a 5mm foil from cable end.
- 2.2) Back cover the braid then wrap the drain wire on it.

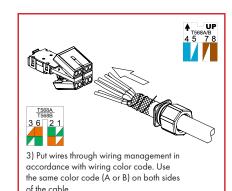


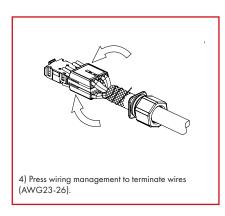


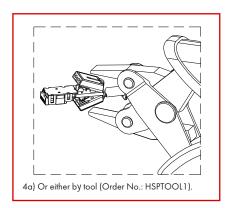

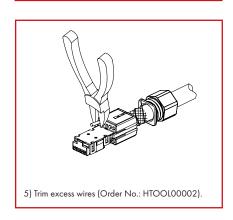

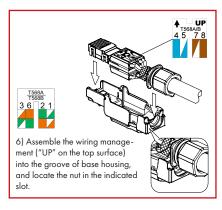

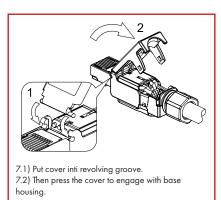

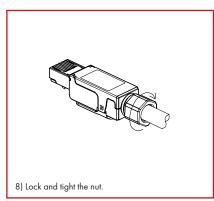

DISASSEMBLY INSTUCTION:

