

Presence detector


**PresenceLight 180**

**PresenceLight 360**

Art. Nr. 200 0 050

Art. Nr. 200 0 000

<b>D</b>	<b>Bedienungsanleitung</b>	<b>2</b>
<b>F</b>	<b>Notice d'utilisation</b>	<b>22</b>
<b>GB</b>	<b>Installation manual</b>	<b>42</b>
<b>E</b>	<b>Manual de instrucciones</b>	<b>62</b>
<b>I</b>	<b>Istruzioni per l'uso</b>	<b>82</b>
<b>NL</b>	<b>Gebruikershandleiding</b>	<b>102</b>

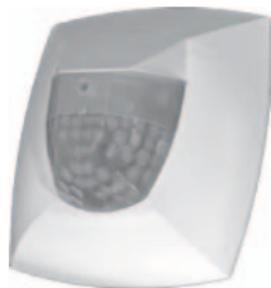

**Presence detector****PresenceLight 180****PresenceLight 360**

## **Table of contents**

1. Safety .....	43
2. Function and performance characteristics .....	44
3. Location / Installation .....	45
4. Start-up .....	48
5. Additional wiring examples .....	51
6. Test mode .....	52
7. Technical specifications .....	53
8. Warranty declaration .....	55
9. Troubleshooting .....	56

Thank you for choosing a Theben HTS presence detector and putting your trust in us.

## 1. Safety

### DANGER !

Any work on electrical systems must exclusively be carried out by qualified electricians or instructed persons under the direction and supervision of a qualified electrician in accordance with the relevant electrotechnical rules! Any national safety regulations regarding the manipulation of electrical systems must be observed! **The voltage supply must be disconnected prior to installation!**

### CAUTION !

The device is maintenance-free. The warranty terminates if the device is opened or entered with any kind of object.

### Designated use

The presence detector is solely intended for the purpose contractually specified between the manufacturer and the user. Any other or extended use has to be regarded as not complying with the designated use. The manufacturer is not liable for any resulting damage.

## 2. Function and performance characteristics

The presence detectors PresenceLight 360 and PresenceLight 180 detect persons within a room on account of slightest movements. Simultaneously, their light sensor measures the brightness in the room and compares it to the pre-set brightness threshold.

PresenceLight 360 is the presence detector of choice for use in small rooms, corridors and wet zones.

PresenceLight 180 is the presence detector of choice for use in corridors, transit zones and wet zones.

**The switching contact A «Light»** switches on the lighting in case of presence **and** insufficient brightness, and off in case of absence **or** sufficient brightness.

- Switching contact «Light»: relays 230V
- Adjustable brightness threshold and switch-off time
- Suitable for fluorescent lamps, compact energy saving lamps as well as for halogen and incandescent lamps
- Pulse function for staircase lighting timer

### 3. Location / Installation

#### 3.1 Detection Range PresenceLight 360

The ideal mounting height is 2,0 - 3,0m.

The sensitivity of the detector decreases with increasing mounting height. In order to ensure proper detection of persons, the PresenceLight 360 requires an unobstructed "view" of the persons. Office equipment, plants, suspended lamps etc. may affect the presence detection (shading).

M'height	Seated persons	Walking persons
2,0m	3,0m x 3,0m	4,5m x 4,5m ± 0,5m
2,5m	4,0m x 4,0m	6,0m x 6,0m ± 0,5m
3,0m	4,5m x 4,5m	7,0m x 7,0m ± 1,0m
3,5m	---	8,0m x 8,0m ± 1,0m


#### 3.2 Detection Range PresenceLight 180

The recommended mounting height is 2,2m. Mounting the device in the height of the switches is not recommended (possible obstacles in the detection range and vandalism).




M'height	Seated persons	Walking persons
2,2m	7,0m x 3,5m	approx. 8m radial distance

Due to the horizontal orientation of the PresenceLight 180, the detection range is very large. The sensitivity decreases by increasing distance.

PresenceLight 360:

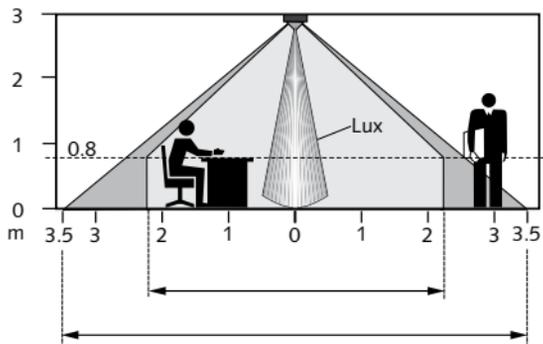

PresenceLight 180:

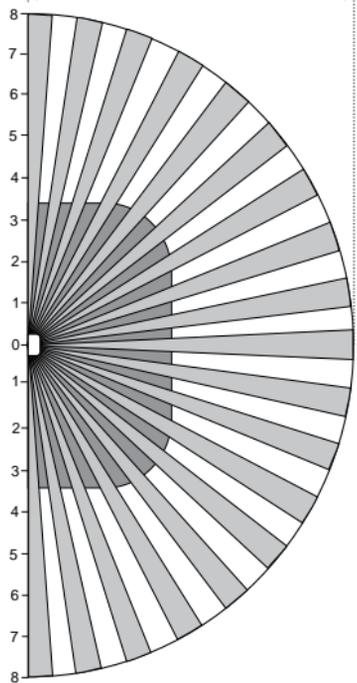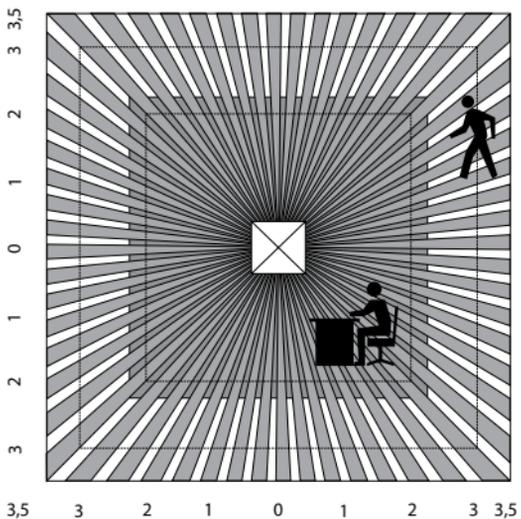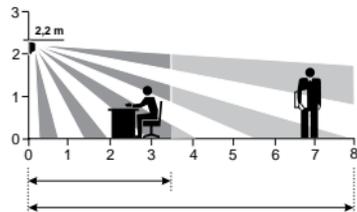

### 3.3 Connection



The presence detector must be flush mounted into a concealed housing. The enclosed set of seals is to be used for IP54 installation.

A suitable frame for surface mounting is also available. If the surface-mounting seal set is used for surface mounting, the detector will also comply with Protection Class IP54.

### 3.4 Protection Class IP54

To ensure compliance with Protection Class IP54 when flush mounted, the presence detector must be installed using the enclosed IP54 seal set for flush mounting as shown in the figure alongside.

If the seal set is not used, only Protection Class IP40 will be achieved.

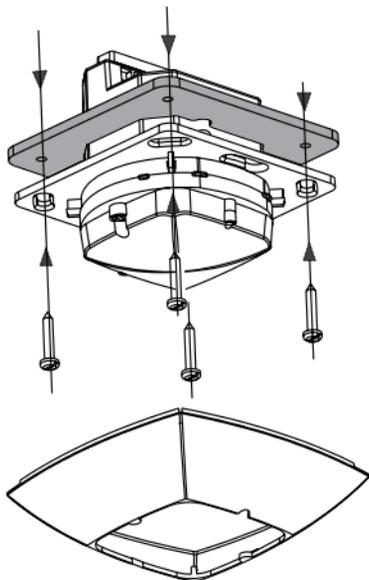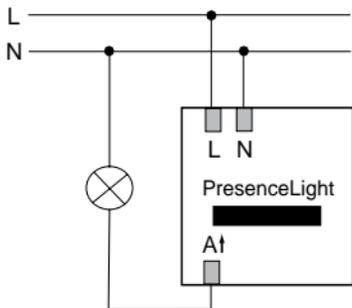

GB



IP54 mounting with gasket set IP54 only!

## 4. Start-up

The detectors are supplied ready for operation with a factory setting of recommended standard values. The QuickSet plus service remote control for starting-up the system is optionally available. With the remote control all potentiometer values can be set from a distance.

### 4.1 Settings for switching contact «Light»

#### Potentiometer

When changing a brightness switching value or a switch-off delay time with the potentiometer concerned, the presence detector switches to the service phase for a period of 10 min. (see section 4.3).

#### ① **Brightness threshold «LUX»**

- Transfer zones (no working area)
- Working areas (small offices)
- Deactivation of brightness measurement



Scale

approx. 2

approx. 4

«on»

PresenceLight 360

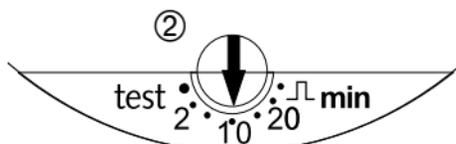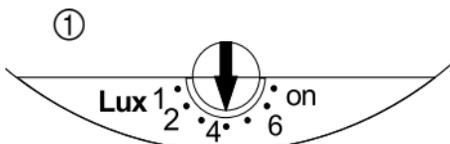

Depending on the installation location, natural light intensity, furniture, reflection characteristics of the room and the furniture it may be necessary to correct the settings by 1-2 steps on the scale. For ease of setting up, we recommend the service remote control QuickSet plus.


## ② Switch-off time delay

- Transfer zones approx. 5min.
- Working areas approx. 10min.
- In the range between 2 - 15min the switch-off delay time varies according to its self-learning behavior. The set values <2min or >15min remain fixed.
- $\sqcup$  «Pulse»: staircase lighting timer control (0.5sec. "on" / 10sec. "off")



The detector always restarts on setting to test operation using the "min" potentiometer, with every adjustment of the «Lux» potentiometer during test operation as well as after completing test operation.

## PresenceLight 180

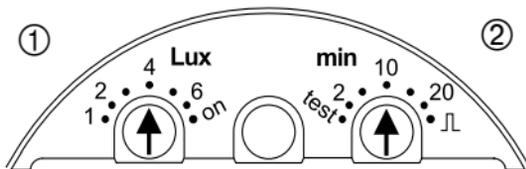

## 4.3 Behaviour on switching on

Whenever the unit is energised, the detector goes through 3 phases.

### 1. Start-up phase (30sec)

- LED flashes every second, switching contact is closed (light on)
- In case of absence, the contact opens after 30sec.

### 2. Service phase (10min)

- The “Light” contact reacts instantaneously on brightness in order to check the brightness threshold.
- If the brightness is insufficient the lighting is switched on (LED on), and if the brightness is sufficient the lighting is switched off (LED off).


### 3. Operation

- The detector is ready for operation (LED off).

## 5. Additional wiring examples


### 5.1 Parallel circuit operation of multiple detectors

- Directly connect the switching contacts of multiple detectors in parallel.
- Set the brightness threshold and the switch-off delay time on all detectors.
- The total permissible load does not increase.

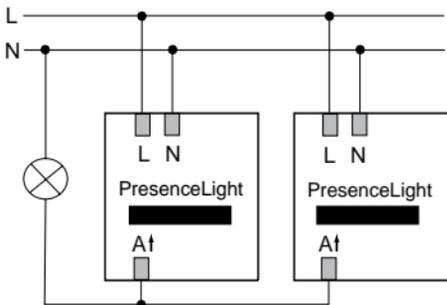

### 5.2 Parallel circuit operation with external staircase lighting timer

- Directly connect the switching contacts of multiple detectors in parallel.
- Set the switch-off delay on all detectors to «pulse».
- Staircase lighting timer e.g. Theben ELPA 1

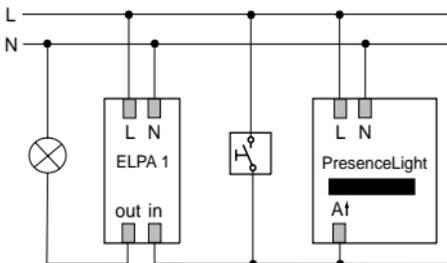

## 6. Test mode

The test mode serves to check the presence detection and the wiring.

### 6.1 Setting the test mode with potentiometer

- Set potentiometer «min.» to «test».



#### 1. Start-up phase (30sec)

- The switching contact is closed for 30sec. ( LED 20s «on», 10s «off» ).

#### 2. Test mode

- In case of movement (LED on), the contact closes.
- In case of absence (LED off), contact opens after 10sec.
- The detectors remain permanently in the test mode.



Please note: brightness measurement inactive in test mode.

### 6.2 Setting the test mode with QuickSet plus

- While setting the test mode with the service remote control QuickSet plus, the detector jumps the startup phase and changes directly into test mode.
- Test mode ceases automatically after 10 minutes. The detector performs a reset (see section 4.3).



<b>PresenceLight 360, PresenceLight 180</b>	
Switching contact	230V ± 10%, 50Hz
In-line fuse	max. 10A
Max. switching capacity incandescent lamps, halogen	1400VA 1200W
Max. nr. of electronic ballasts *) (A relay or contactor must be connected in case of more powerful devices)	5x (1x80W) 10x (1x58W); 5x(2x58W) 16x (1x36W); 8x(2x36W) 16x (< 36W)
<b>Mounting</b>	
Mounting depth	40mm
Mounting diameter	50mm
Mounting plate (integrated)	70x70mm
Screw Terminals	max. 2 x 2.5mm <sup>2</sup>
Size of concealed housing	Size 1, (NIS, PMI)
Ambient temperature	- 20° to 50° C
Degree of protection (installation with gasket set or surface-mounting frames)	IP54
<b>Article numbers</b>	
PresenceLight 360	200 0 000
PresenceLight 180	200 0 050
Surface frame PresenceLight including gasket set IP54	907 0 513
Service remote control QuickSet plus	907 0 532
User remote control clic	907 0 515

\*) Use of T5-FL: When using T5-FL lamps with a comparable wattage, the same number of electronic ballasts may be connected to the detector's switching contact as for the T8-FL. When using the 80W-FL, the number should be halved in comparison to the 58W-FL.

## 8. Warranty declaration

Theben HTS presence detectors are manufactured and quality-tested with the utmost care using state-of-the-art technologies. Theben HTS therefore guarantees perfect function, provided the detectors are used as intended. However, should a defect occur, Theben HTS offers the following warranty within the scope of its General Terms and Conditions of Business:

Please bear in mind the following points:

- The warranty period is 24 months, commencing from the manufacturing date.
- The warranty becomes null and void if you or third parties undertake alterations to the units.
- If the presence detector is connected to a software-controlled system, the warranty for this connection is only valid provided the stated interface specification is adhered to.

We undertake to repair or replace as quickly as possible all supplied components which have become defective or unusable as a result of demonstrably bad material, faulty design or defective workmanship up to the expiry of the warranty period.

## Returns

In the event of a warranty claim please send the unit together with the delivery note and a brief description of the fault to the dealer concerned.





## Industrial property rights

The concept including hardware and software of these units is protected by copyright.

## 9. Troubleshooting





Fault	Cause
Lighting does not switch on or switches off in case of presence and darkness	Lux value setting is too low; Person ist outside of detection range; Detection is disturbed by obstacles; Set switch-off delay time setting is too short.
During presence, lighting is on although brightness is sufficient	Lux value setting is too high; Detector is in test mode
Lighting does not switch off or switches on spontaneously in case of absence	Wait until the switch-off delay time has elapsed (self-learning); Disturbing heat sources within the detection range: heaters, incandescent/halogen lamp, moving objects (e.g curtains due to open windows); Load (ballasts, relais) has no interference suppression
Error blinking (4x per second); Lighting does not switch off	Failure during self test; Device not working!

## Dimensions PresenceLight 360

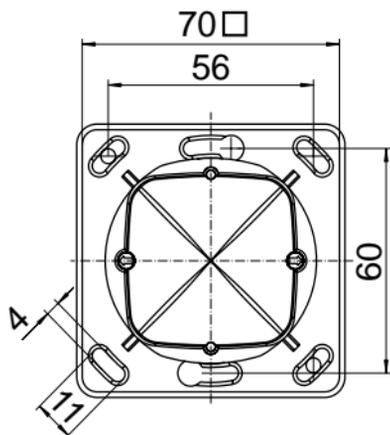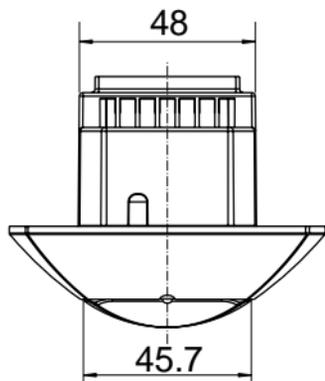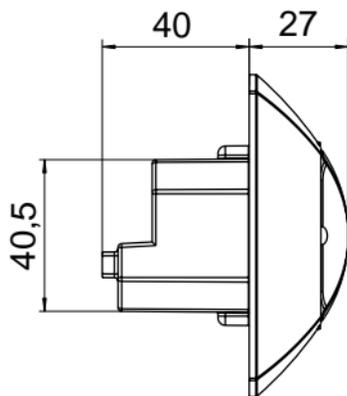
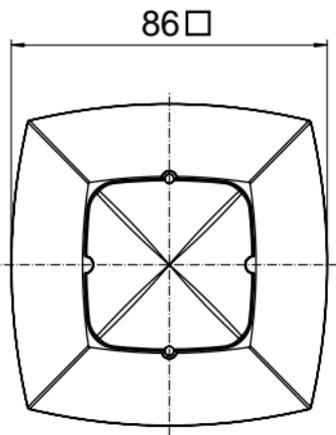


GB

## Dimensions PresenceLight 180

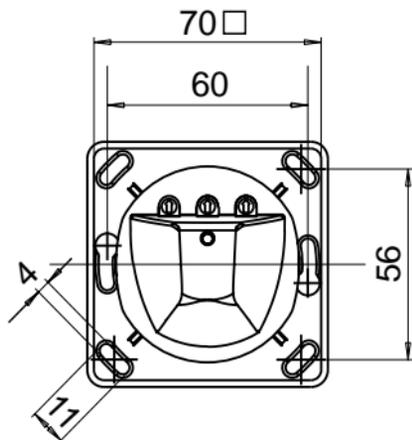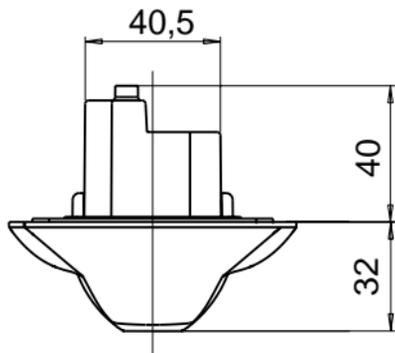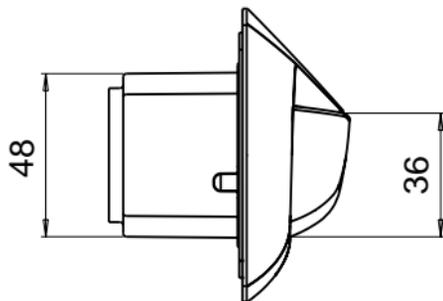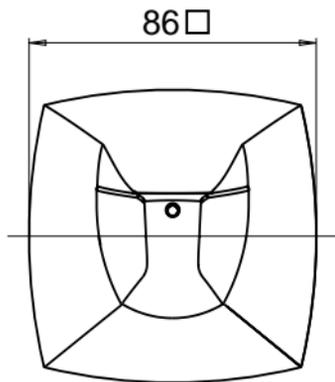

## Dimensions surface frame for PresenceLight 360, PresenceLight 180

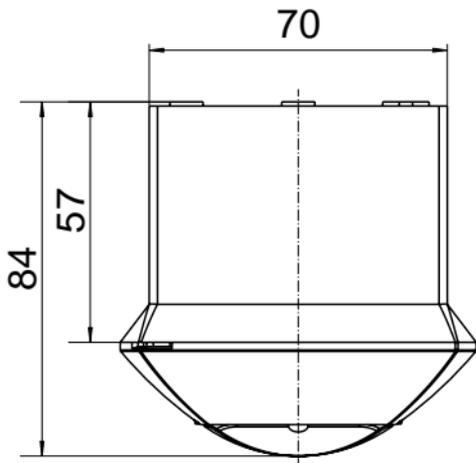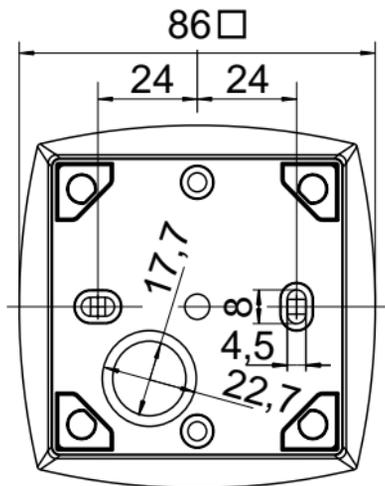

GB

### Declaration of CE conformity



This device complies with the protection regulations of the EMC directive 2004/108/EC and of the Low Voltage directive 2006/95/EC.

Subject to change without prior notice. Errors and omissions excepted.

## **Theben AG**

Hohenbergstrasse 32, DE-72401 Haigerloch

Tel. +49 (0) 74 74 692 - 0

Fax +49 (0) 74 74 692 - 150

## **Hotline**

Tel. +49 (0) 74 74 692 - 369

Fax +49 (0) 74 74 692 - 207

hotline@theben.de

Switzerland

## **Theben HTS AG**

Im Langhag 11, CH - 8307 Effretikon

Tel. +41 (0)52 355 17 00

Fax +41 (0)52 355 17 01

www.theben-hts.ch

Die Kontaktadressen für weitere Länder finden Sie auf [www.theben.de](http://www.theben.de)

Veuillez consulter les adresses pour des pays supplémentaires sur [www.theben.de](http://www.theben.de)

Please find the contact addresses for additional countries on [www.theben.de](http://www.theben.de)

Las direcciones de contacto de otros países las encontrará en [www.theben.de](http://www.theben.de)

Gli indirizzi per ulteriori paesi sono disponibili su [www.theben.de](http://www.theben.de)

De contactadressen voor andere landen vindt u op [www.theben.de](http://www.theben.de)